

#2810001 Massage Stone Heater Safety Instructions

- 1) Do not touch hot surfaces. Always use handles and knobs.
- 2) Before plugging the appliance into the wall, ensure that the temperature control knob is in the off position. (Turned all the way counter-clockwise)
- 3) When finished using the appliance, turn the temperature control knob to the off position and unplug from the wall.
- 4) Do not place the appliance, plug, or cord in water or any liquid.
- 5) Close supervision is necessary when the appliance is used by or near children.
- 6) Unplug from the outlet when not in use or before cleaning. Ensure unit is cool completely before handling parts or cleaning.
- 7) Do not operate the appliance if it has a damaged cord, plug or has malfunctioned in any way.
- 8) Do not use outdoors.
- 9) Do not let the cord hang over the edge of a table or counter, or touch hot surfaces. Never pull on the cord.
- 10) Do not place on or near a hot gas or electric burner or in a heated oven.
- 11) Extreme caution must be used when moving an appliance containing hot oil or hot liquids.
- 12) Do not use appliance for other than intended use, as described in this manual.

#2810001 Massage Stone Heater Operating Instructions

- 1) Plug unit into wall outlet and ensure that temperature control dial is in the off position. (All the way counter clockwise)
- 2) Place clean stones on bottom of heater pan.
- 3) Add enough water to completely cover stones by at least 1/2 inch. Adding hot water will speed up the warming process.
- 4) Turn temperature control dial all the way clockwise to the "Preheat" setting.
- 5) Monitor the water temperature by using a quality thermometer. Once desired temperature is reached (typically between 125 and 150 degrees Fahrenheit), turn temperature control dial counter clockwise to the center of the normal operating range.
- 6) Fine tune temperature from this point by making slight adjustments counter clockwise for cooler temperatures and clockwise for warmer temperatures.
- 7) When finished, and prior to cleaning, turn temperature control dial all the way counter clockwise and unplug the warmer.