



## Ultrasonic Aromatherapy Nebulizer Instruction Manual

### CONTENTS



- Timer Controls
- Specifications
- Product Features
- Components Description
- Safety Instructions
- Operating Instructions
- Troubleshooting

### TIMER CONTROLS

#### A. On/Off Switch

#### B. Timer switch (5 settings):

1. Unit works continuously. Automatically stops when water level drops too low.
2. Unit works continuously for 2 hours and will automatically stop.
3. Unit disperses for 5 seconds and rests for 40 seconds.
4. Unit disperses for 15 seconds and rests for 50 seconds.
5. Unit disperses for 30 minutes and rests for 15 minutes.


### SPECIFICATIONS

External Dimension	17,5cm x 15cm x 11cm
Transformer	110V-24V/750mA : 220V-24V/800mA
Maximum working voltage	24V/750mA
Maximum input	18W
Operation frequency	1.7 MHZ
Atomizing rate	50 – 60 ml/hr (max)
Particle Size	Approx. 3 micro-meter
Accessory	Humidifier, transformer, dispersal nozzle, cover
Water level	0,5cm (0.2") below water blocking cover
Water level safety stop	Operates at 1,3cm (.5") of water in tank
Capacity	250ml

### PRODUCT FEATURES

- Safety:** No flame or heat source since the cool mist is generated by ultrasonic vibrations.
- User Friendly:** Level of mist and output duration can be adjusted to reflect your own personal needs.
- Operation:** Once filled the unit can operate up to 5 hours.
- Digital Control:** Digitally programmed to stop automatically when the minimum water level is reached. Energy efficient.
- Functions:** Can be used as a nebulizer, humidifier or air purifier.
- Features:** Special night-light installed with On/Off feature.

### COMPONENT DESCRIPTION

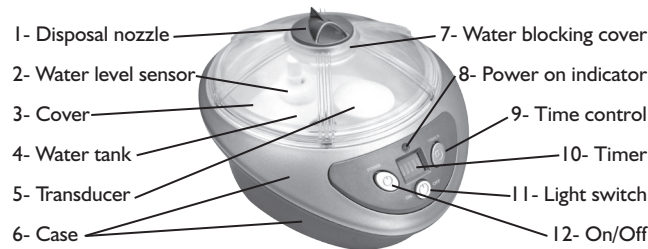

### SAFETY INSTRUCTIONS

- Please follow the instructions to operate the product.
- Use only the adapter supplied to operate the unit.
- Water level should not be more than 1/5 inch below the cover.  
**Over-filling with water may damage the unit.**
- **Plug-in the power supply only after filling the unit with water.**
- Keep the unit on a flat and secure surface at all times.
- Before moving the unit, make sure you unplug the unit from the power supply.
- Do not operate the unit with wet hands.
- Unplug the unit once you have finished using it.
- If a problem arises, shut off and unplug the unit. Do not attempt to open the unit; repairs should be carried out only by a qualified service center.
- **DO NOT IMMERSE THE UNIT IN WATER AND DO NOT OVERFILL.**
- The unit will automatically stop working once the water level reaches a minimum level.
- **For indoor use only.**
- **DO NOT WASH IN A DISHWASHER.**
- **KEEP AWAY FROM CHILDREN AND PETS.**

### OPERATING INSTRUCTIONS

1. Remove the cover (3) and dispersal nozzle (1).
2. Fill the water tank (4) with water. The minimum level is 0,3cm (0.5") and the maximum is 0,5cm (0.2") below the cover.
3. Add 3-5 drops of your favorite essential oil to the water.
4. Replace the cover and dispersal nozzle.
5. With dry hands, plug the power supply into the under side of the unit.
6. Plug the adaptor into a standard household outlet.
7. Press the ON/OFF switch to the ON position (12).
8. Select the preferred time setting (9).
9. **Do not immerse in water. Do not overfill.**

### CLEANING INSTRUCTIONS

- Clean the unit with a soft cotton cloth after each use.
- Do not use any cleaning agent. This will keep the unit in good working order and maximize the atomizing rate.
- **DO NOT TRY CLEANING THE UNIT BY IMMERSING IT IN WATER.**
- **DO NOT WASH IN A DISHWASHER.**

### SOLVING PROBLEMS DIY

PROBLEM	SOLUTION
<b>When switched on the unit does not operate.</b>	<ul style="list-style-type: none"> <li>• Check that the power supply is securely plugged into the socket at the rear of the unit.</li> <li>• Check that the main plug is securely plugged into the wall socket.</li> <li>• Check that there is water in the tank and that the water level is correct.</li> </ul>
<b>No dispersal or less than usual.</b>	<ul style="list-style-type: none"> <li>• Check for correct water level.</li> <li>• Check if the water level sensor (2) is jammed.</li> <li>• Check to see if the transducer (5) is clean; do not use any cleaning agents (see Operating Instructions).</li> <li>• Check to see if the top cover (3) is securely fitted.</li> <li>• Restart the unit.</li> </ul>