

HOT TOWEL CABINET

OPERATING INSTRUCTIONS



Thanks for choosing our product
Please read through the manual before using.

Operating Instructions - Hot Towel Cabinet

This Hot Towel Cabinet is designed to keep moist towels used in facial and body treatments warm. The interior of the cabinet will reach around 80°C/176°F. It will maintain this temperature throughout the day while the cabinet is on.


The cabinet features an ultra-violet (UV) bulb on the back wall which ultraviolet light which may help prevent damp towels from becoming stale or from developing a musty odor while in the cabinet. Please note the UV function is not an appropriate method of sterilizing soiled or used implements. Proper techniques must be used to ensure effective sterilization. The UV bulb has a life of approximately 2,000 hours.

Please note this UV function is not an appropriate method of sterilizing soiled or used items.

The interior of the cabinet will reach around 80°C/176°F. It will maintain this temperature throughout the day while the cabinet is turned on.

Parts

- 1.Red light
(indicates Warming function)
- 2.Green light
(indicates UV function)
- 3.ON/OFF switch
for Warming function
- 4.ON/OFF switch
for UV function
- 5.Ultra-violet (UV) light
- 6.Rack
- 7.Water drip-tray

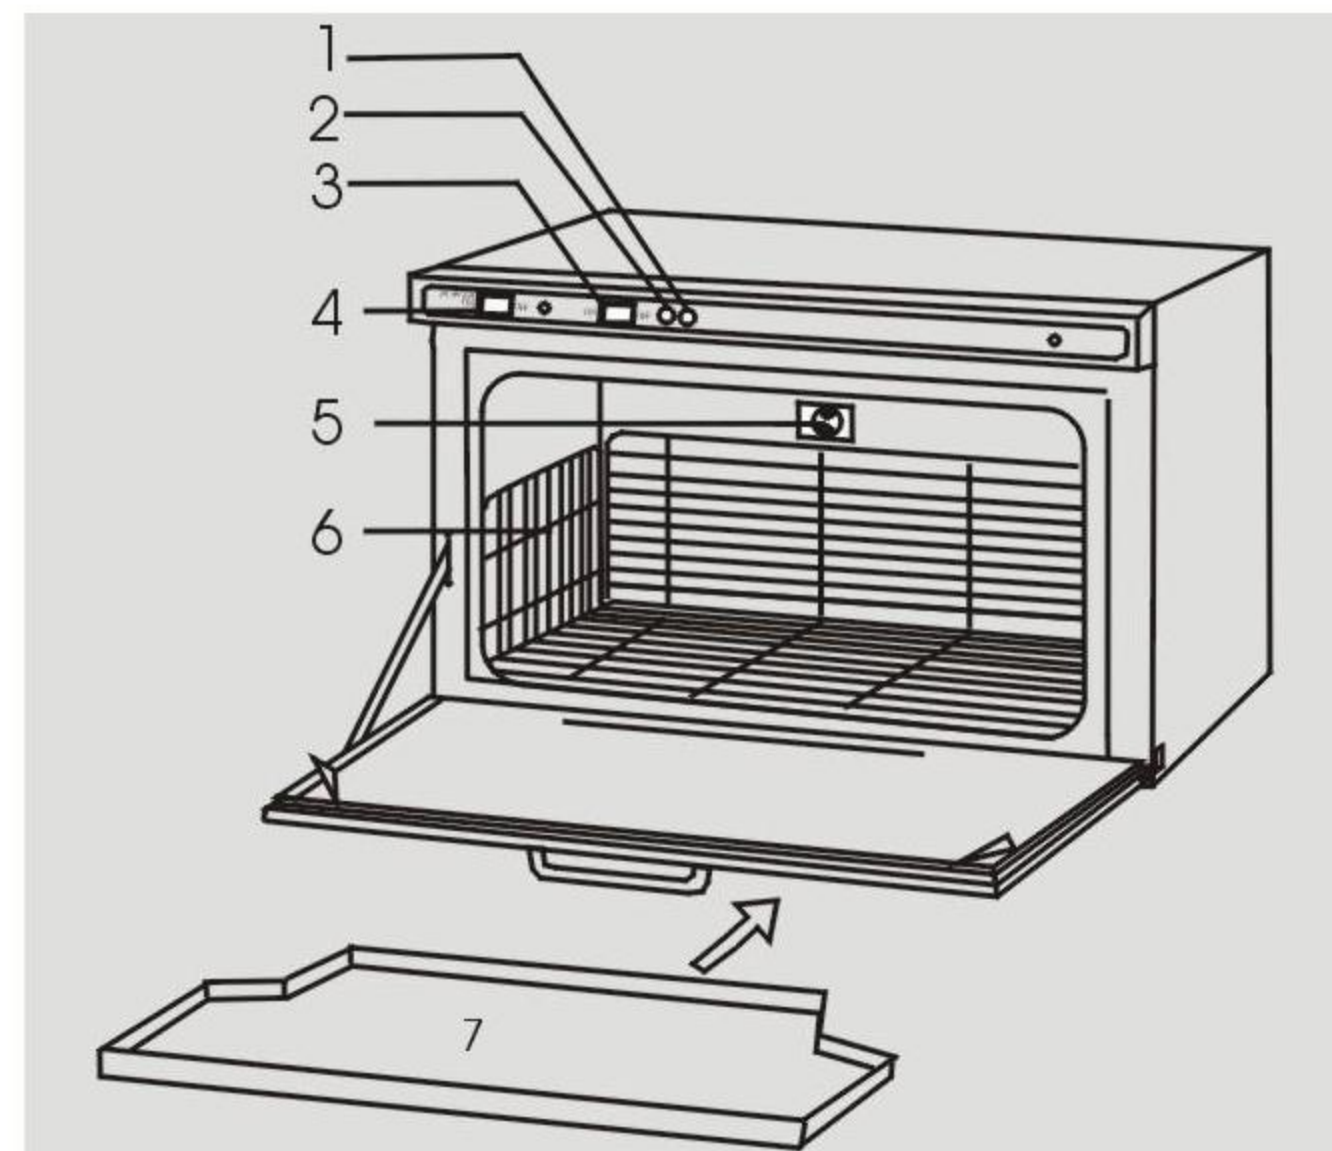

- 1.Remove any plastic or foam packaging from the inside and outside of the cabinet.
- 2.Set up cabinet on a level counter or trolley. Ensure 5cm (2 inches) clearance on all sides of the cabinet.
- 3.Plug the power cord in at the wall point and turn on.
- 4.Prepare towels. Dampen towels thoroughly with water then wring out excess water. Fold towels or roll into a cylindrical shape.
- 5.Place the damp towels into the cabinet, stacking them evenly.
- 6.Turn the Warming function switch (3) to “ON” . A red light (1) will illuminate to show that the function is working and the unit is now heating.
- 7.The towels will be ready for use in approximately 20-30 minutes.
- 8.The UV function may be used by turning the switch (4) to “ON” . A green light (2) will illuminate to show that the UV function (5) is on.


- 9.The door should remain closed while the cabinet is in use. Open the door only when adding or removing towels.
- 10.You must turn both switches to “OFF” at the end of each day.
- 11.Remove unused towels at the end of the day. Start with fresh towels every day.
- 12.The water drip-tray (7) should be detached from the undercarriage of the cabinet and emptied at the end of each day. (It is attached by a metal clip at each front edge of the undercarriage.)

Safety:

- 1.The inside walls of the cabinet and the metal rack (6) become very hot while the cabinet is in use. Avoid touching these surfaces.
- 2.Do not attempt to move the cabinet while it is in use.
- 3.Do not operate the cabinet in a wet environment. The room temperature should be between 0°C/32°F to 40°C/104°F.
- 4.Please ensure that children cannot access the cabinet.
- 5.Care should be taken that the skin or eyes of the user is not exposed to the UV light for any extended period of time. When the UV function is in use, keep the door of the cabinet closed. Avoid looking at the light when opening the cabinet.
- 6.The towels can become very hot if they are kept in the cabinet for an extended period of time. Please check the temperature of the towels when taking them out of the cabinet, before using them on the skin.

Cleaning and Maintenance

1. Inside and outside surfaces should be cleaned using a soft non-abrasive cloth and warm, soapy water or mild, non-abrasive cleanser daily.
2. The drip tray should be removed and emptied each day.
3. The door should be kept open each night to eliminate any excess moisture.
4. Be safe! Do not attempt to repair the unit yourself. Contact your distributor for repair information.

Model: 267 0024
Trade Name: HOT CABINET
Voltage: AC220V-240V 50Hz
Power: 200W
Serial No.: <input type="text"/>
 N 16135